 
 
 
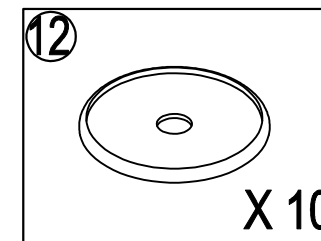 
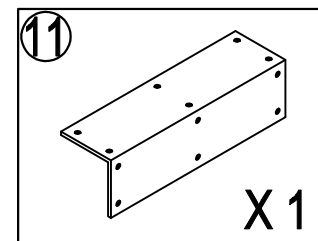 
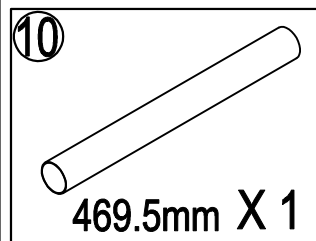 
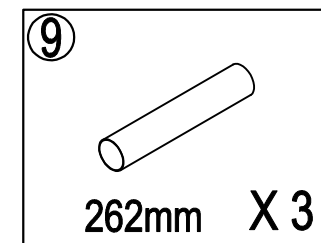 
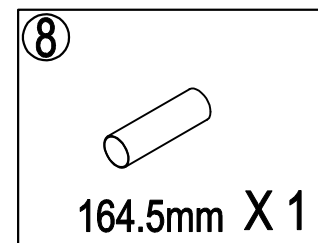 
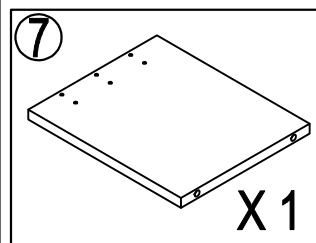 
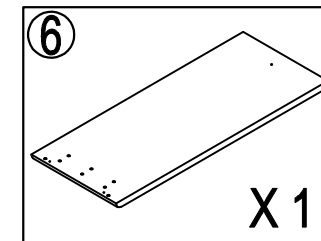 
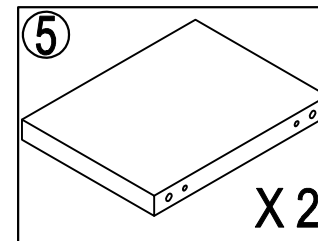 
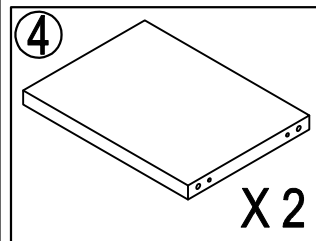 
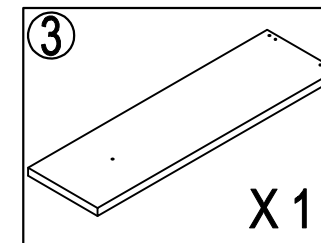 
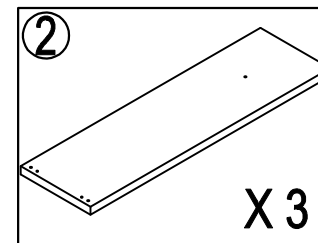 
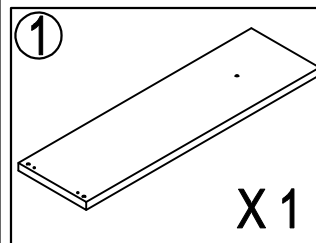 
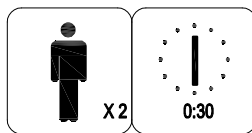 
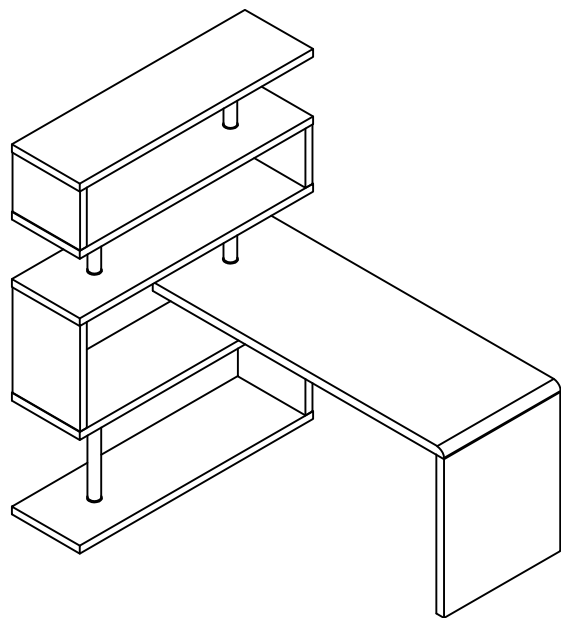 









ASSEMBLY INSTRUCTIONS

DINING TABLE MODEL#: UCD7019




<p>A</p>  <p>X 18</p>	<p>B</p>  <p>320MM X 6</p>	<p>C</p>  <p>X 1</p>	<p>D</p>  <p>X 14</p>	<p>E</p>  <p>X 14</p>
<p>F</p>  <p>525MM X 6</p>	<p>G</p>  <p>730MM X 2</p>	<p>H</p>  <p>X 12</p>	<p>I</p>  <p>X 1</p>	

 
1

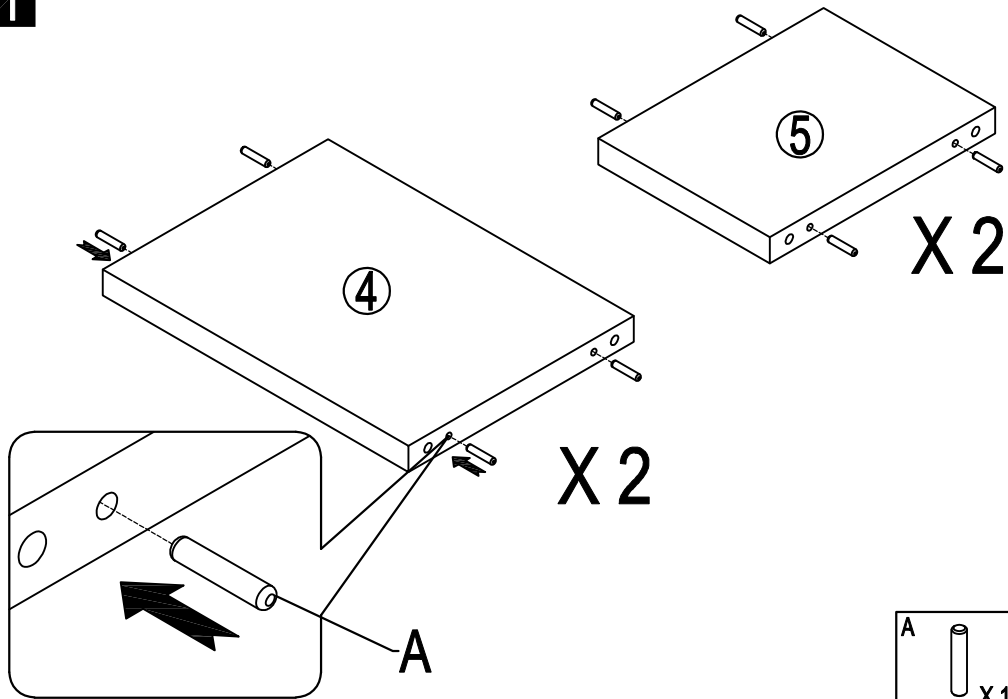


2




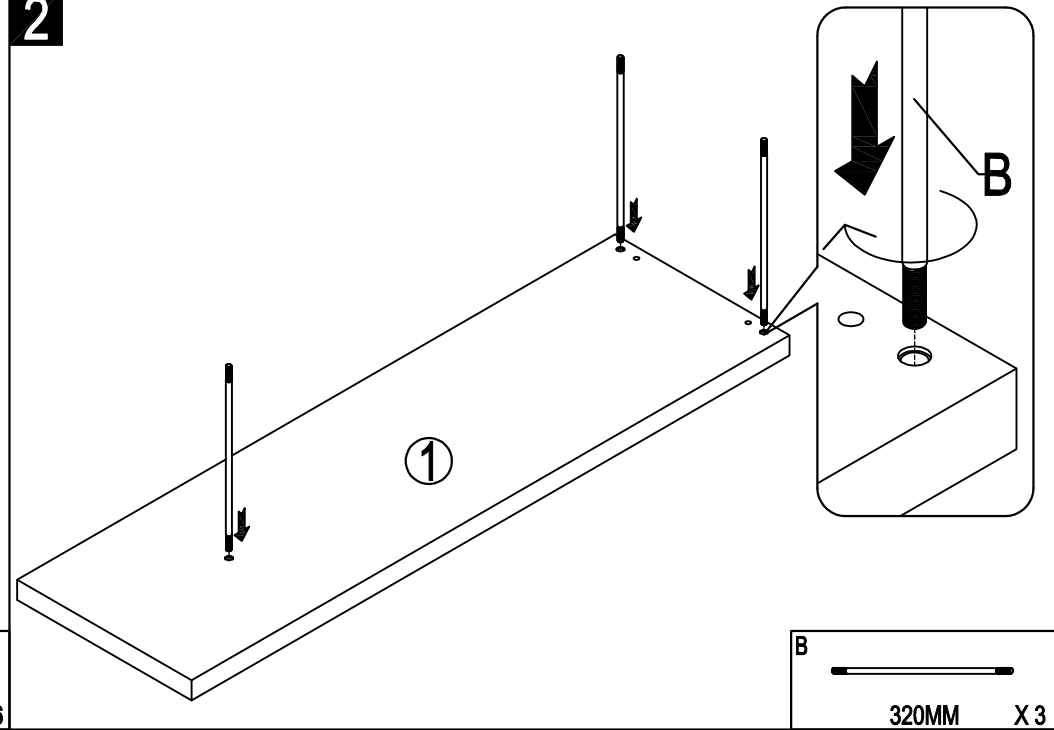 


3

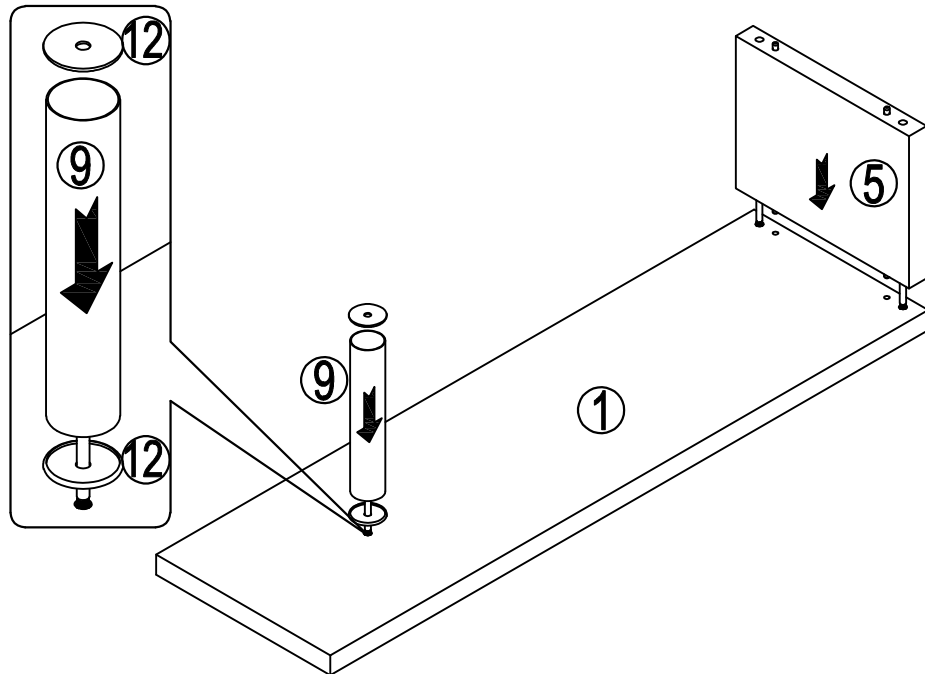 


4


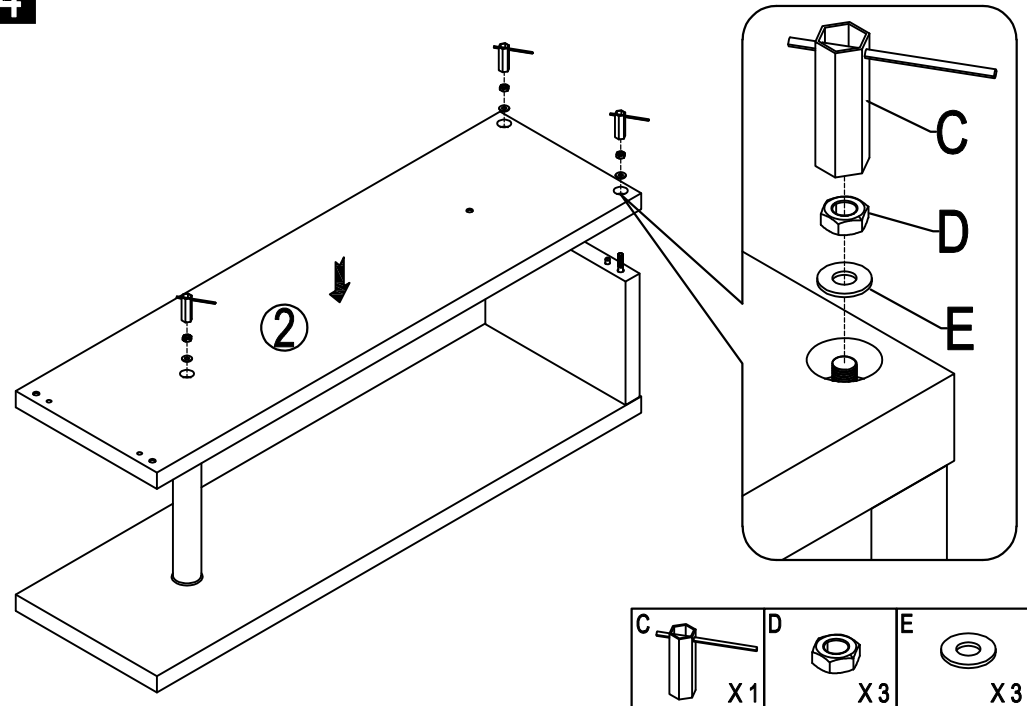 


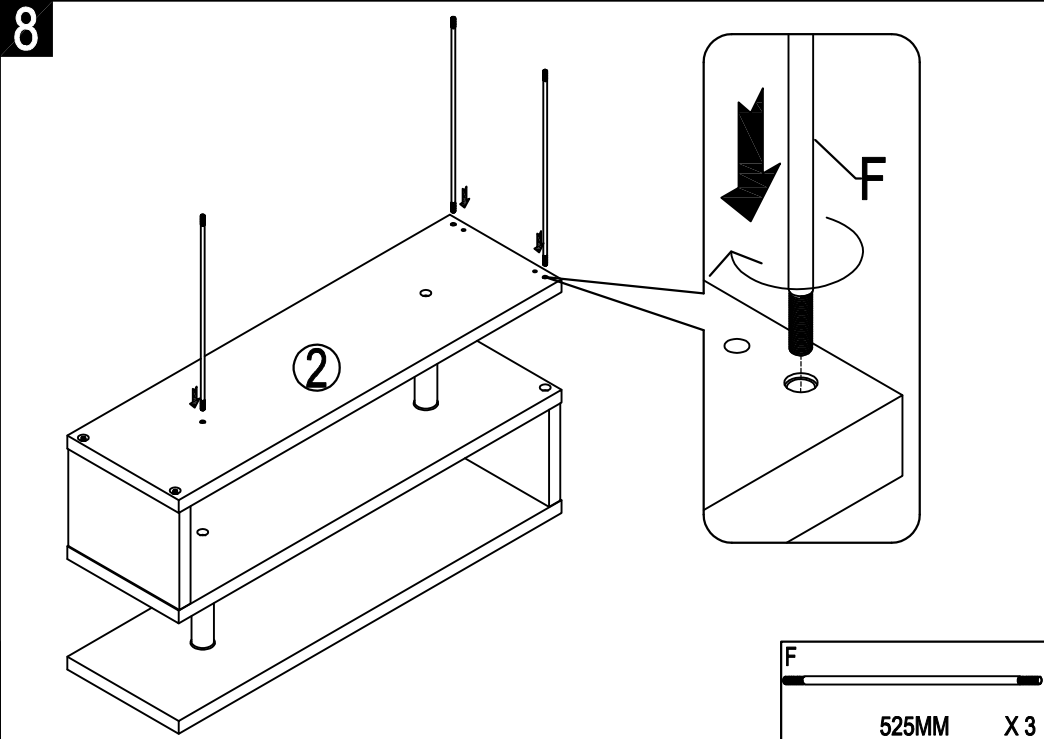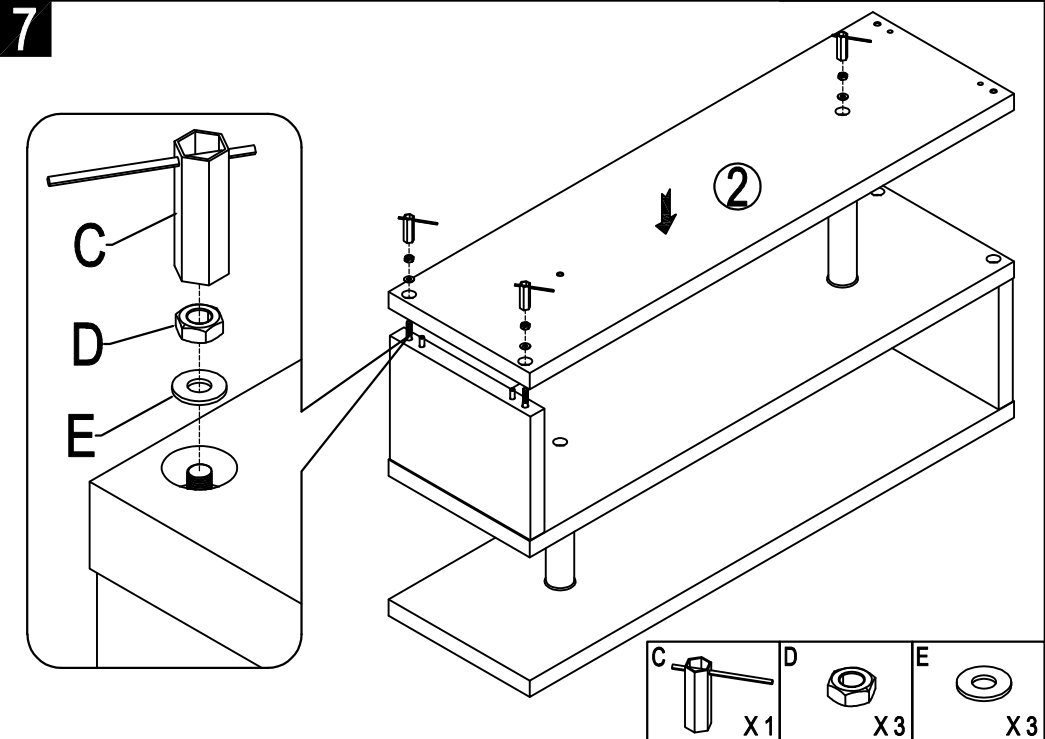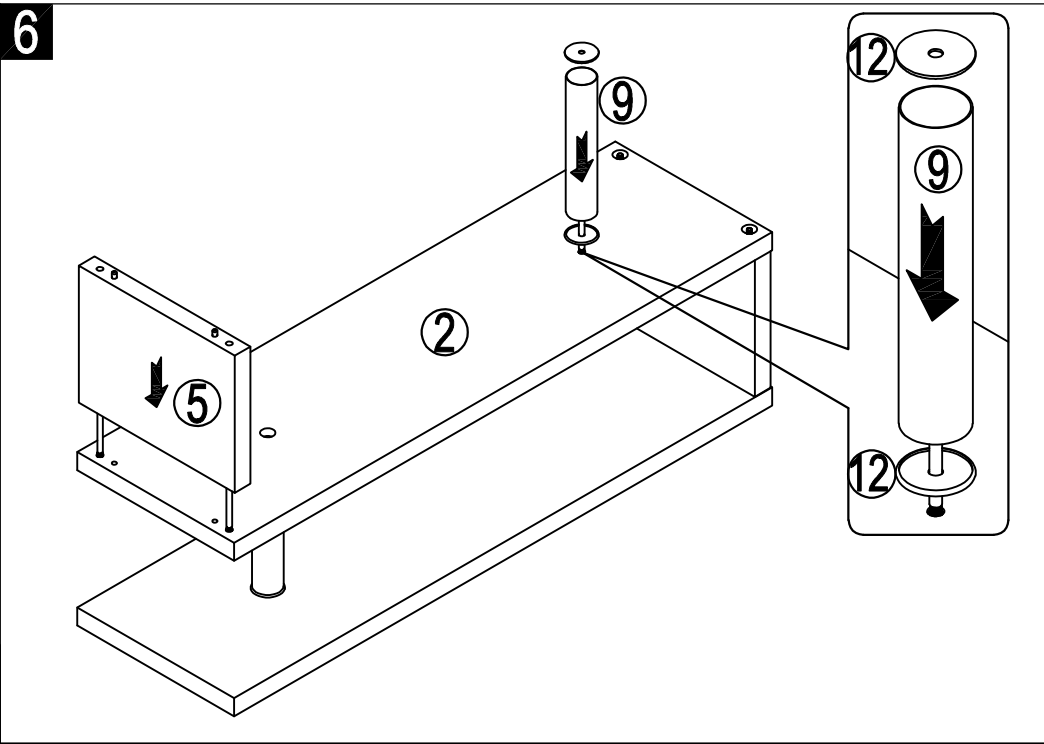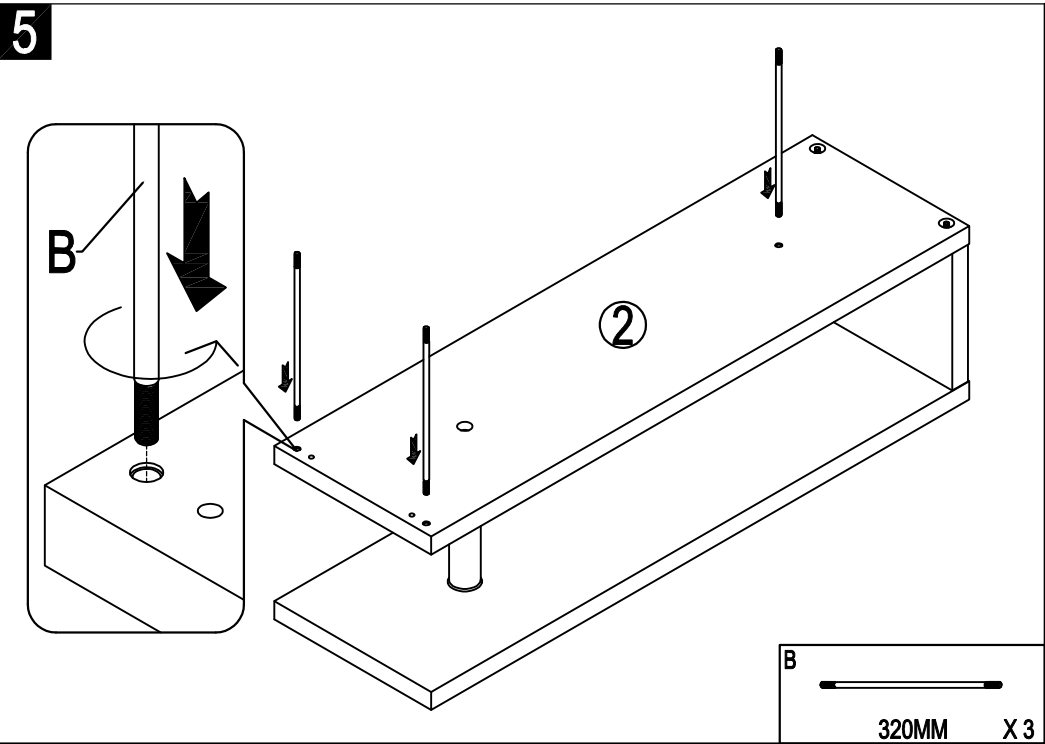    



9

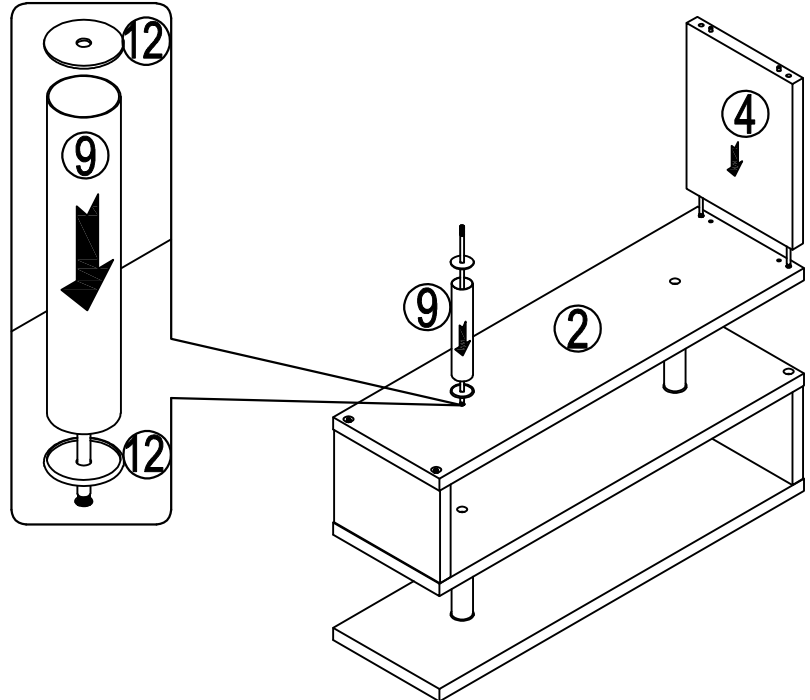 



10

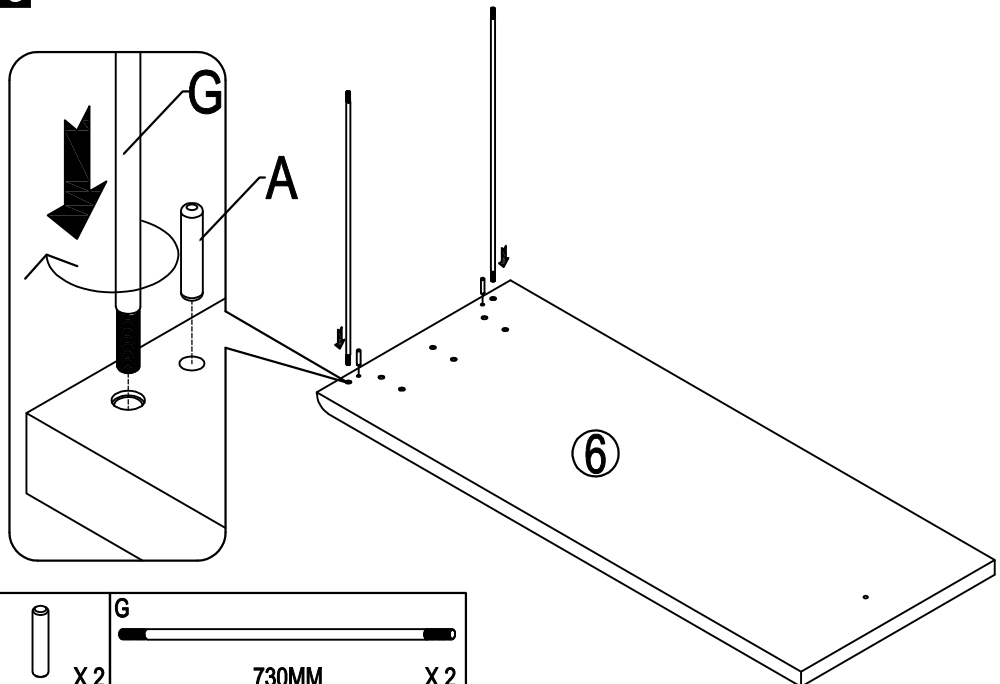  


11

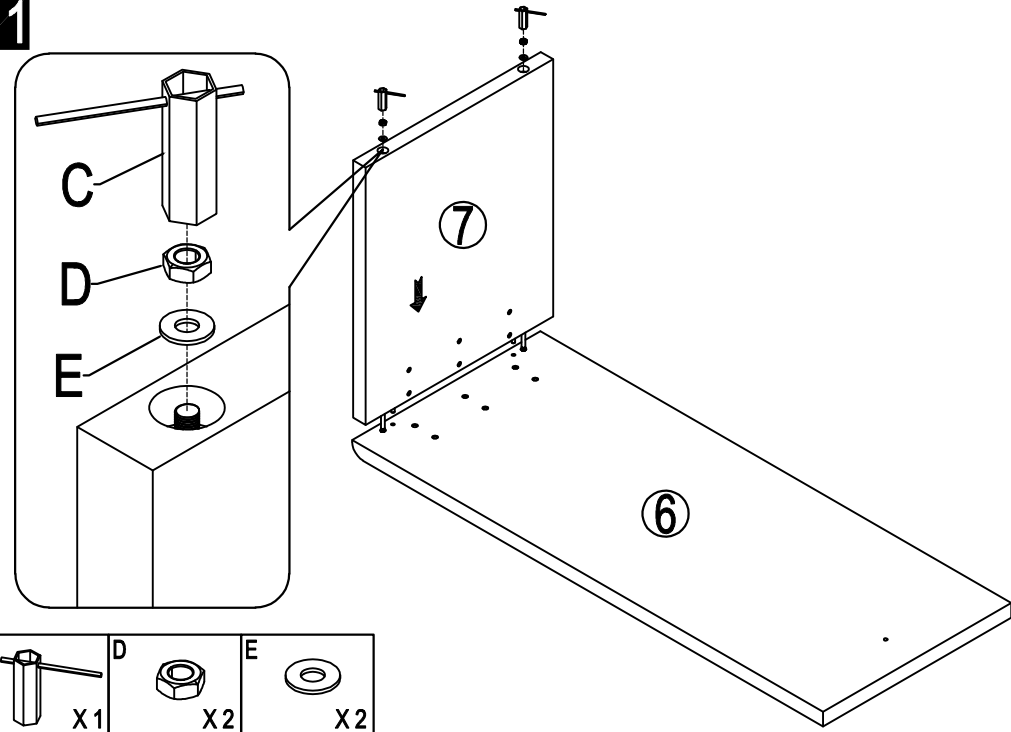  


12

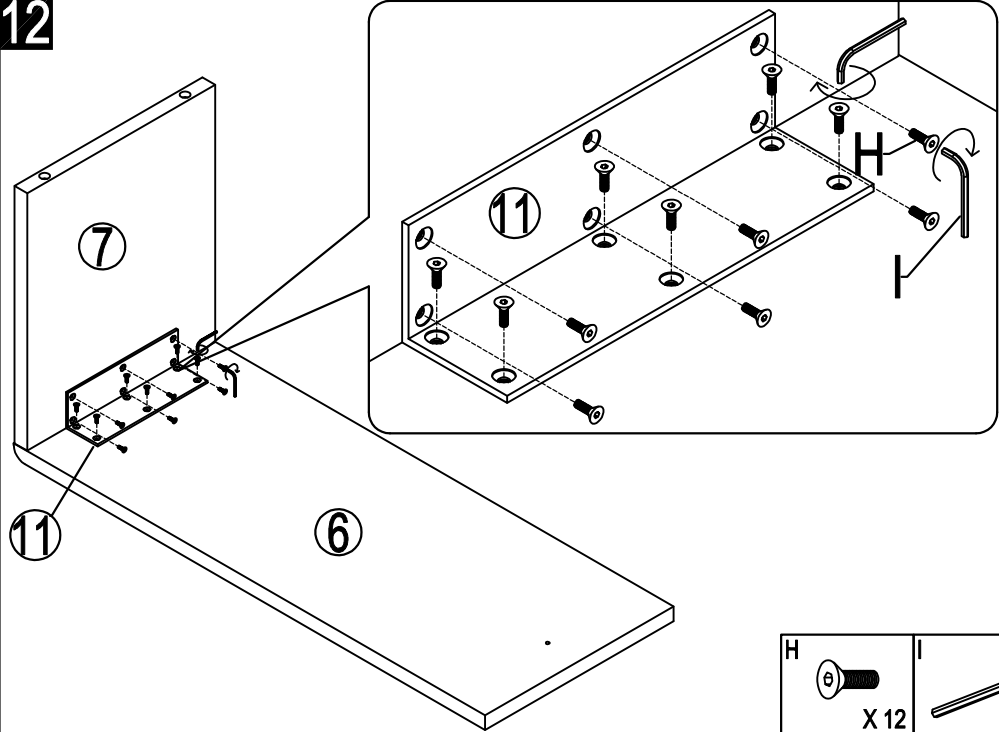  


13

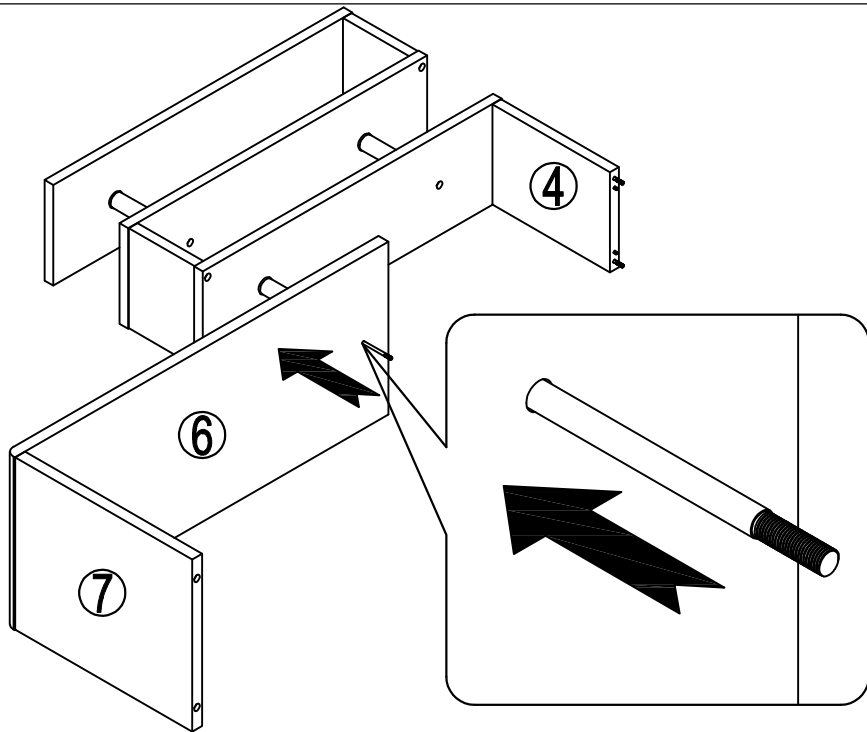 



14

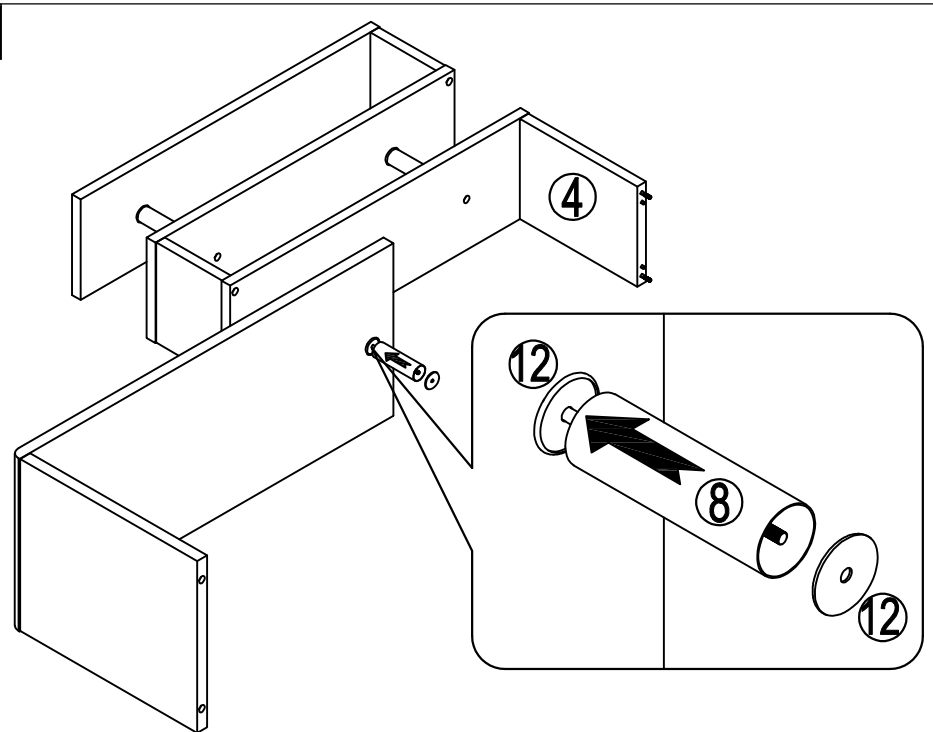 


15

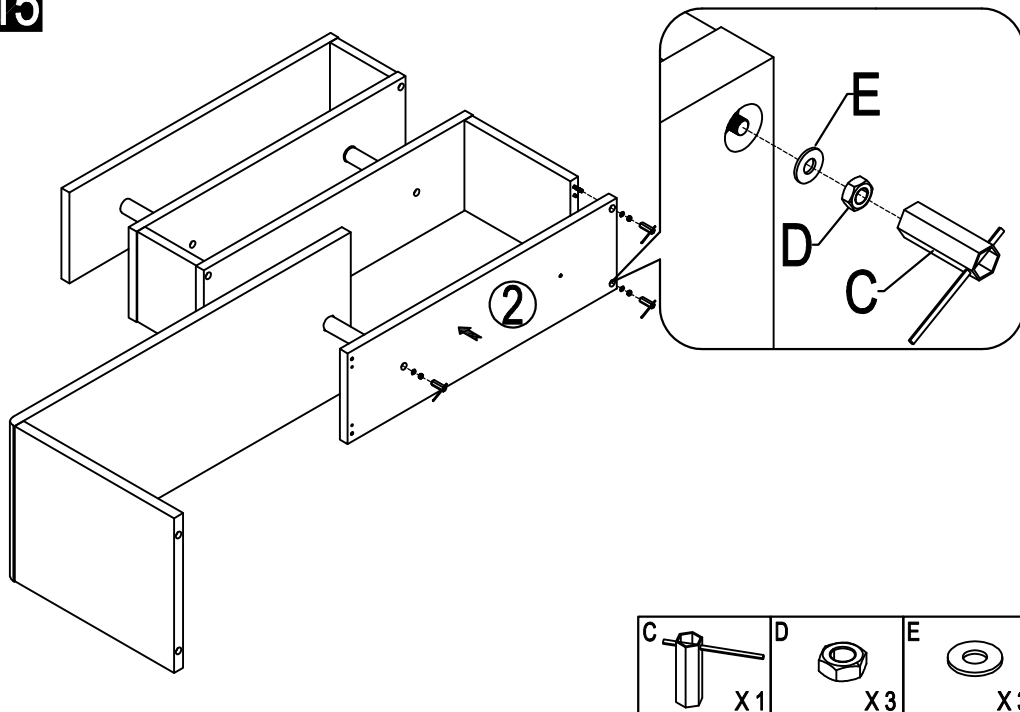 

16

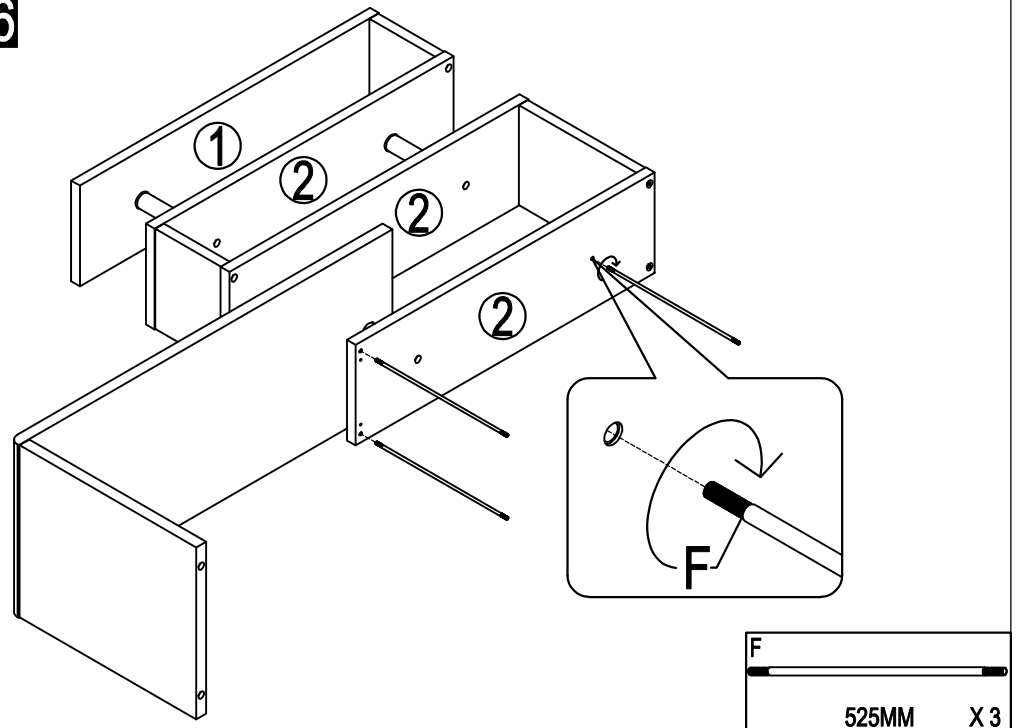  

17

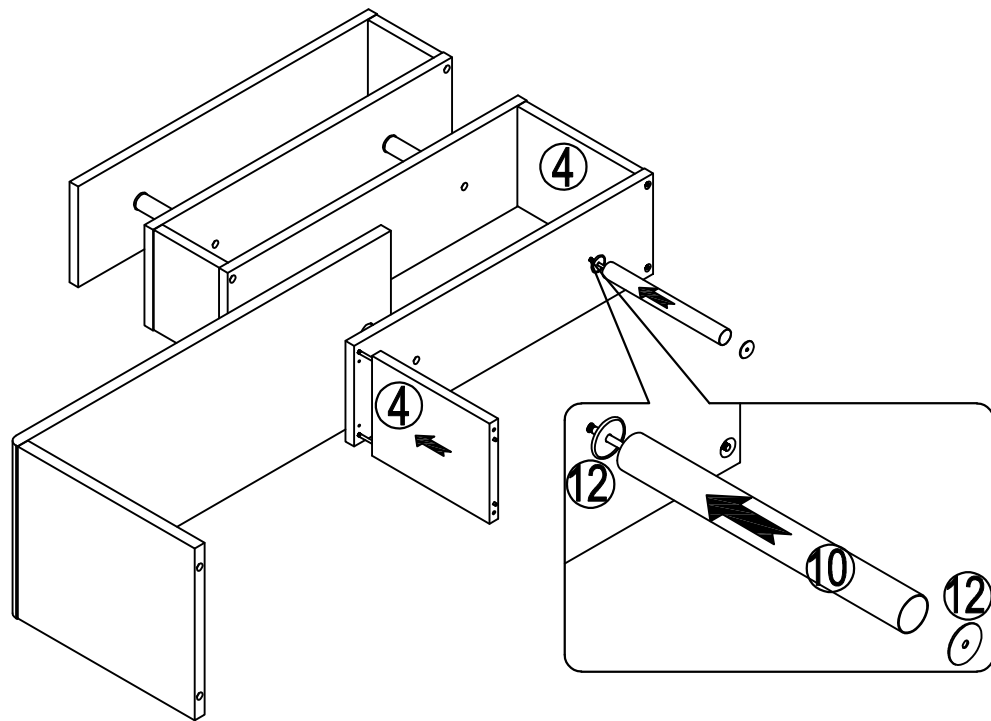 

18

